


RFCA Attachment 5

Figure 3: Subsurface Soil Risk Screen

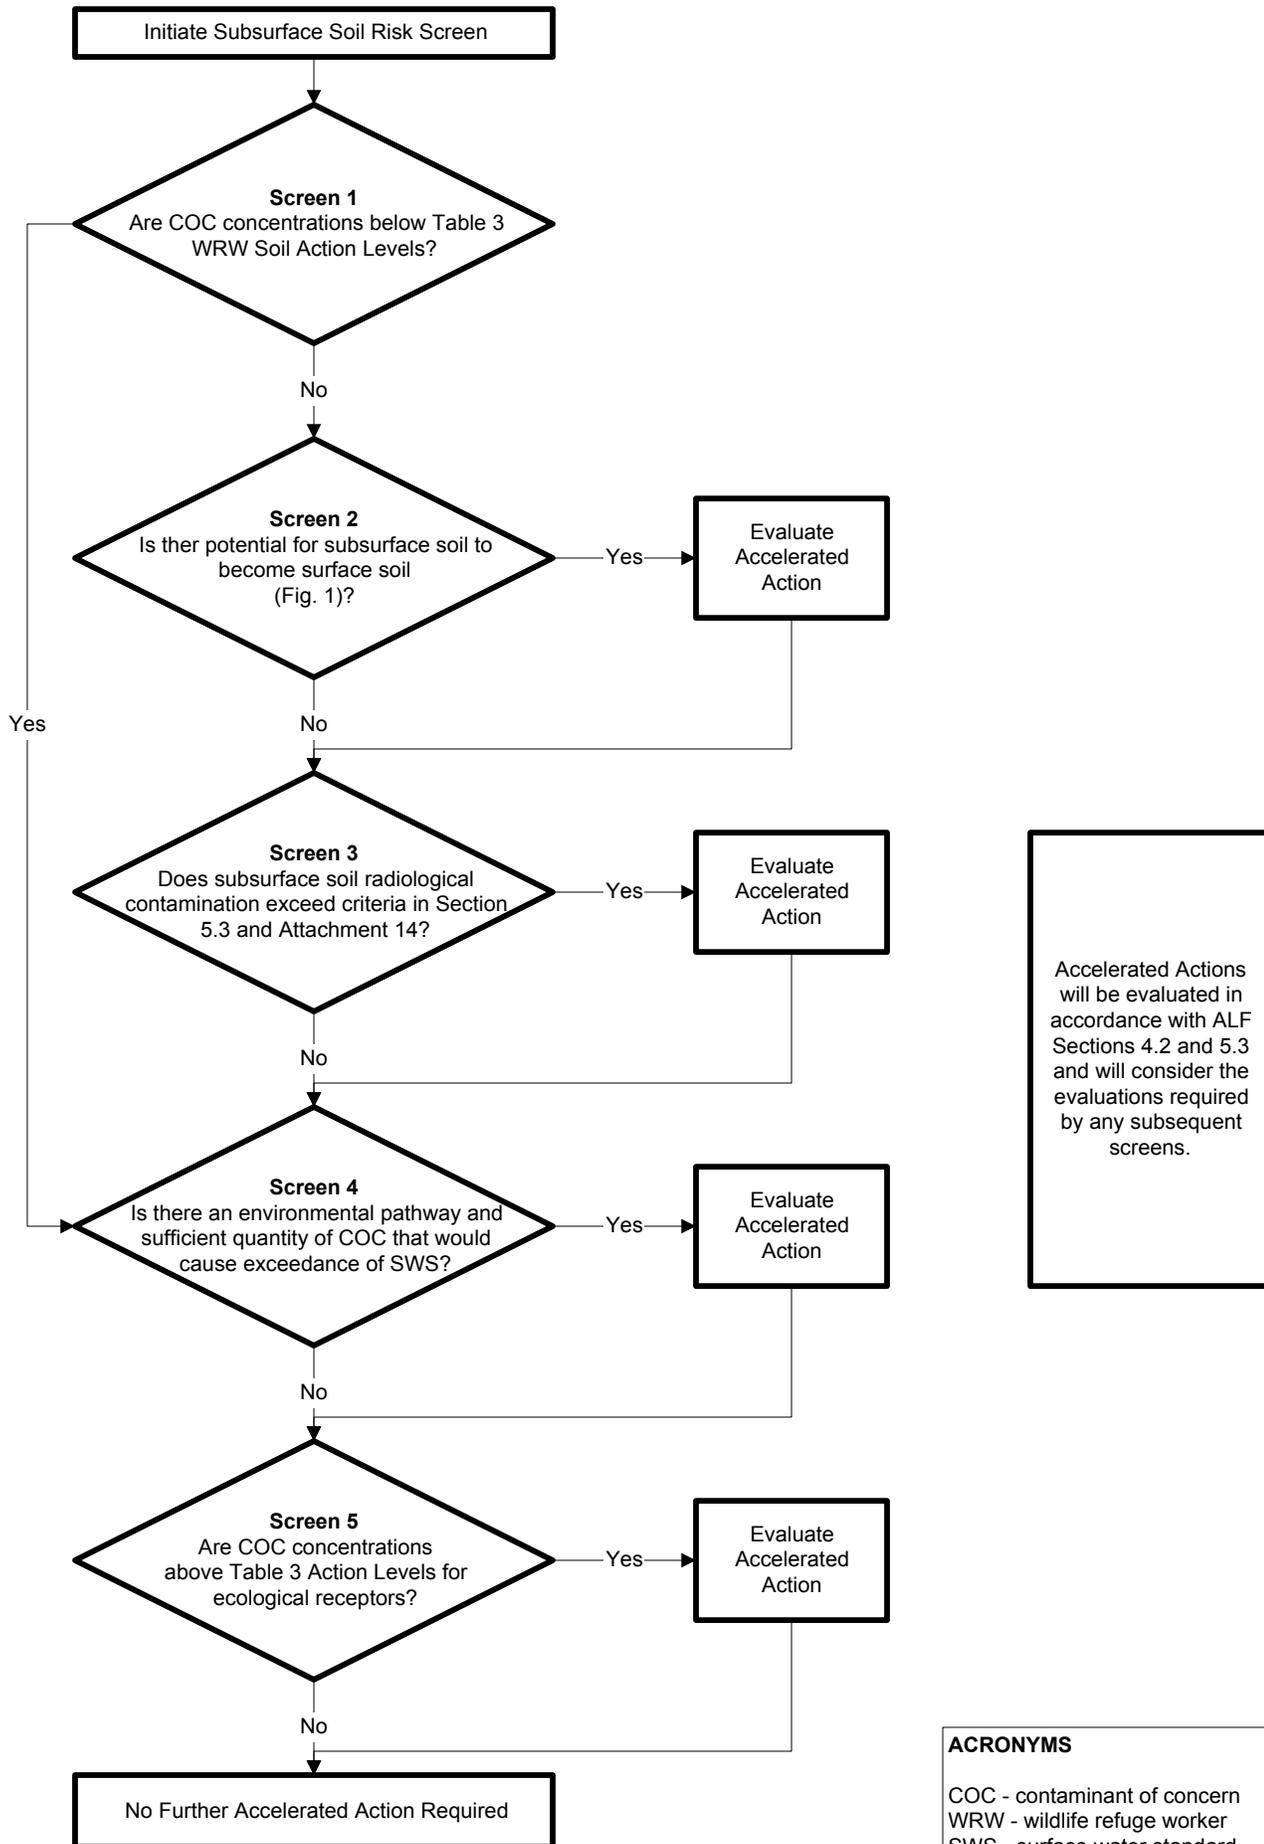

ACRONYMS

COC - contaminant of concern
 WRW - wildlife refuge worker
 SWS - surface water standard
 ALF - action level framework