

Rocky Flats Environmental Technology Site

Integrated Monitoring Plan

FY2001

This Page Intentionally Left Blank

CONTENTS

	<u>Page</u>
Acronyms and Abbreviations	v
1.0 INTRODUCTION	1
1.1 Integrated Monitoring Plan	2
1.2 Data Quality Objectives	3
1.3 Quality Assurance	3
2.0 SURFACE WATER	5
2.1 Introduction	5
2.2 Site-Wide Water Quality	9
2.2.1 Monitoring Dam Operations	9
2.2.2 Locating New Contaminant Sources	11
2.2.3 <i>Ad Hoc</i> Monitoring	11
2.2.4 Monitoring for Correlation of Plutonium with Indicator Parameters	11
2.3 Water Quality Within the Industrial Area	12
2.3.1 Incidental Water	13
2.3.2 Sanitary System Monitoring	13
2.3.2.1 Characterization of Internal Wastewater Streams to Meet Permit Requirements	14
2.3.2.2 Monitoring Discharges to the WWTP	14
2.3.2.3 Monitoring the WWTP Collection System	15
2.3.2.4 WWTP Collection System Flow Monitoring	15
2.3.2.5 WWTP Radiological Monitoring	15
2.3.3 Performance Monitoring	15
2.3.4 Monitoring NPDES Discharges to Ponds	16
2.4 Industrial Area Discharges to Ponds	16
2.4.1 New Source Detection	16
2.4.2 Stream Segment 5	17
2.5 Water Leaving the Site	18
2.5.1 Predischarge Monitoring	18
2.5.2 Segment 4 Compliance Monitoring	18
2.5.3 Non-POC Monitoring at Indiana Street	18
2.6 Off-Site Monitoring to Support Community Water Supply Management	19
2.6.1 Monitoring Uncharacterized Discharges	19
2.6.2 Community Assurance Monitoring	19
2.7 Watershed Integration	20
2.8 Project-Specific Monitoring	21

	<u>Page</u>
3.0	GROUNDWATER 23
3.1	Purpose..... 23
3.2	Monitoring Focus..... 23
3.3	Monitoring Program..... 24
	3.3.1 Well Locations 25
	3.3.2 Groundwater Sampling and Analysis 25
3.4	Data Disposition..... 26
	3.4.1 Databases 26
	3.4.2 Reporting..... 26
3.5	Groundwater Evaluations..... 27
3.6	Well Abandonment and Replacement Program (WARP) 27
3.7	Project-Specific Monitoring..... 27
4.0	AIR QUALITY 29
4.1	Purpose and Programs..... 29
	4.1.1 Ambient Air Monitoring 29
	4.1.2 Effluent Monitoring 29
	4.1.3 Meteorological Monitoring..... 29
4.2	Site Air Monitoring Scope 31
	4.2.1 Ambient Air 31
	4.2.2 Effluent 31
	4.2.3 Meteorological Conditions..... 32
4.3	Special Project Monitoring 32
5.0	ECOLOGY 33
5.1	Monitoring Objectives 33
5.2	Scope of Monitoring 35
	5.2.1 Preble’s Meadow Jumping Mouse..... 36
	5.2.2 Wetlands 36
	5.2.3 Project-Specific Monitoring..... 36
5.3	Data Disposition..... 37
5.4	Reporting..... 37
6.0	INTERACTIONS AMONG MEDIA 39
7.0	REFERENCES 41

LIST OF FIGURES

		<u>Page</u>
Figure 1	Schematic Surface Water Map.....	10

LIST OF TABLES

Table 1	Surface Water Monitoring Matrix	6
Table 2	Groundwater Monitoring Matrix	24
Table 3	Air Monitoring Matrix	30
Table 4	Ecological Monitoring Matrix	34

This Page Intentionally Left Blank

ACRONYMS AND ABBREVIATIONS

AoI	Analyte of Interest
ALF	Action Levels and Standards Framework
AQM	Air Quality Management
BDCWA	Big Dry Creek Watershed Association
BMP	Best Management Practice
CAA	Clean Air Act
CDPHE	Colorado Department of Public Health and Environment
CERCLA	Comprehensive Environmental Response, Compensation, and Liability Act
CLP	Contract Laboratory Program
ComRad	Community Radiation Program
COCs	Contaminants of Concern
Cr	Creek
CWA	Clean Water Act
CWQCC	Colorado Water Quality Control Commission
D&D	Decontamination and Decommissioning
DMR	Discharge Monitoring Report
DOE	Department of Energy
DOE, RFFO	Department of Energy, Rocky Flats Field Office
DQO	Data Quality Objective
DRCOG	Denver Region Council of Governments
EcMPD	Ecological Monitoring Program Database
EPA	U.S. Environmental Protection Agency
ER	Environmental Restoration
FERC	Federal Energy Regulatory Commission
FY	Fiscal Year
GIS	Geographic Information System
IDLH	Imminent Danger to Life and Health
IMP	<i>Integrated Monitoring Plan</i>
Kaiser-Hill	Kaiser-Hill Company, L.L.C.
L	Liter
LEL	Lower Explosive Limit
m	Meter
NPDES	National Pollutant Discharge Elimination System
NSD	New Source Detection
OP	Operating Procedure
OU2	Operable Unit 2
PA	Protected Area
PCB	Polychlorinated Biphenyl
POC	Point of Compliance
POE	Point of Evaluation
POps	<i>Pond Operations Plan</i>
QA/QC	Quality Assurance/Quality Control

RAAMP	Radioactive Ambient Air Monitoring Program
Rad NESHAP	National Emission Standards for Hazardous Air Pollutants - Radionuclides
RCRA	Resource Conservation and Recovery Act (Colorado Hazardous Waste Act)
RFCA	<i>Rocky Flats Cleanup Agreement</i>
RFEDS	Rocky Flats Environmental Data Base System
RFETS	Rocky Flats Environmental Technology Site
SED	Sitewide Ecological Database
Site	Rocky Flats Environmental Technology Site
SSC	Species of Special Concern
SWD	Site Soil and Water Database (formerly RFEDS)
T&E	Threatened and Endangered (species)
TAL	Target Analyte List
TDS	Total Dissolved Solids
TSS	Total Suspended Solids
VOC	Volatile Organic Compound
WARP	Well Abandonment and Replacement Program
WQCD	Water Quality Control Division
WWTP	Wastewater Treatment Plant
yr	Year

1.0 INTRODUCTION

Environmental monitoring programs at the Rocky Flats Environmental Technology Site (RFETS or the Site) continue to evolve in response to new regulatory requirements and accelerated Site closure activities. Various monitoring programs have amassed data on soils, surface water, groundwater, air, and different ecological systems. The *Rocky Flats Cleanup Agreement* (RFCA)(DOE et al., 1996) requires U.S. Department of Energy (DOE), in consultation with the Colorado Department of Public Health and Environment (CDPHE) and the U.S. Environmental Protection Agency (EPA), to establish an Integrated Monitoring Program that effectively collects and reports the data required to ensure the protection of human health and the environment. The program is consistent with the RFCA Preamble, and complies with RFCA, laws and regulations, and effective management of RFETS's resources.

This *Integrated Monitoring Plan* (IMP) identifies the routine monitoring programs for surface water, groundwater, air, and ecology designed to minimize duplication of efforts among DOE, CDPHE, the cities of Broomfield and Westminster, and associated data management systems.

This IMP details the Site monitoring activities performed for legal, contractual, and operational purposes. It restates the agreed-upon types of monitoring, monitoring locations, sampling frequencies, and purposes of the monitoring. Much of the monitoring discussed in this document is performed to satisfy specific regulatory requirements and not due to the RFCA agreement. Where this is the case, such monitoring requirements are not subject to enforcement pursuant to RFCA, but may be subject to enforcement in accordance with the initiating legal requirements. In addition, the Site's monitoring programs encompass Best Management Practices (BMPs) that are not required by RFCA or other federal and state laws and regulations. The BMPs are incorporated into the IMP, but may be dependent on the availability of federal funding in accordance with RFCA, Paragraph 249.

In developing the Integrated Monitoring Program, Site personnel met with a working group of representatives from EPA, the State of Colorado, and the cities of Westminster, Northglenn, Thornton, Arvada, and Broomfield to develop consensus on the types of data to be gathered and their eventual uses including the data quality objectives, or DQOs, described in this IMP. The program is designed to provide data that meet the DQOs needed to support operational and regulatory decision making, and to address the requirements of the following regulations, Permits and Agreements:

- The Resource Conservation and Recovery Act (RCRA);
- The Comprehensive Environmental Response, Compensation, and Liability Act of 1980 (CERCLA);
- The Clean Air Act (CAA);
- The Clean Water Act (CWA);
- National Pollutant Discharge Elimination Systems (NPDES) Permit;
- Standards promulgated by the Colorado Water Quality Control Commission;
- Rocky Flats Cleanup Agreement (RFCA);
- The body of regulations governing natural resource (ecological) management;
- Site-specific monitoring and cleanup agreements; and
- DOE Orders and technical guidance.

1.1 Integrated Monitoring Plan

This Fiscal Year (FY) FY2001 IMP is a revision of the FY2000 IMP and the FY2000 *IMP Background Document* (Kaiser-Hill, 1998) which describe the activities being conducted at the Site under the Integrated Monitoring Program to satisfy RFCA and other regulatory requirements and interests. The FY2001 *IMP Background Document*, provides detailed discussions of the decision-making process that has resulted numerous monitoring efforts at the Site. This IMP lists the monitoring programs to which DOE and the other regulatory agencies are committed. The *IMP Background Document* provides additional information on the DQO decision process and the regulatory framework that drives many of the monitoring decisions at the Site. The *IMP Background Document* is not subject to enforcement under RFCA.

Both the IMP and the *IMP Background Document* will continue to change with time. One significant change in monitoring in FY2001 is the inclusion of the surface water special source investigation of RFCA Point of Evaluation (POE) GS10 subdrainage. Since the inception of RFCA monitoring in FY97, reportable values for americium and plutonium have been observed every spring at monitoring location GS10. This annual reoccurrence prompted the Site to conduct a special source investigation of the GS10 subdrainage. Field sampling for this source investigation was completed during FY2000 and sample analysis, interpretation of results and report preparation will be completed during FY2001.

This IMP lists the ongoing environmental monitoring activities that DOE, CDPHE, EPA, and other stakeholders have supported during the numerous working group meetings used to formulate monitoring-based decisions. It provides an overview of the requirements for these activities and the intended uses of the data that result. Monitoring is performed in four primary areas—surface water, groundwater, air, and ecological systems. Specific Site activities may involve soil monitoring, Site-wide soil monitoring was discontinued in 1994, after many years of characterizing transuranic-contaminant distributions across the Site. Interactions among these media have been recognized and discussed in some detail. The data collected can be used to support investigations into these interactions to the extent that the interactive effects are themselves measurable.

Each of the four major monitoring programs is discussed below. In addition, a fifth medium, soil, and its related monitoring is discussed. Soil data relate to all of the other media in some way and continue to be important to the other programs, to future projects and project planning, and ultimately to Site closure. A discussion of soil monitoring at the Site is included in Section 6 of the *IMP Background Document*.

1.2 Data Quality Objectives

Representatives of DOE, Rocky Flats Field Office (RFFO), Kaiser-Hill, and the various federal, State of Colorado, and local stakeholder groups together developed a set of Data Quality Objectives (DQOs) to ensure that environmental monitoring data would satisfy the requirements of the regulations listed above and would aid in detection of conditions that could lead to unacceptable risks to public health and the environment. The data will be used to (1) model contaminant movement and identify contaminant concentrations that exceed pre-established limits; (2) support planning, implementation, and assessment of Site remedial and D&D activities; (3) address regulatory reporting requirements and commitments; and (4) monitor various ecological systems at the Site. Therefore, the data need to meet or exceed quality requirements to ensure accuracy in modeling, risk assessment, performance assessment, and compliance. The data must be of sufficient quality to withstand scientific and legal scrutiny, and they must be gathered using procedures that are appropriate for their intended use in making decisions for Site activities. Each environmental monitoring program includes a set of data usability requirements and procedures to ensure that high-quality data are produced.

1.3 Quality Assurance

The quality of the RFETS environmental monitoring data is ensured through careful planning and design of monitoring programs and implementation of work control procedures that address sampling, analysis and data management activities. Presented in this document are major decisions that need to be made based on monitoring data, how the data will be applied in decision making, and the approaches used to obtain the data. Procedures cover all monitoring activities, including sampling, analysis and data management, and consists of approved, controlled documentation. Monitoring procedures are referenced in the various environmental program plans, which are

contained in the RFETS Environmental Management Program Manual (MAN-080-EMPM, 9/98).

Site environmental program and analytical services managers have a significant role in controlling the quality of environmental monitoring data. They are responsible for designing adequate environmental monitoring programs, collecting environmental samples and field data of high quality, properly submitting samples, ensuring all data are managed per procedures, and interpreting and reporting monitoring results.

Minimum requirements for laboratory quality assurance/quality control (QA/QC) programs have been promulgated. These requirements ensure that each laboratory generating data has procedures for assuring that the precision, accuracy, completeness and representativeness of data generated are known and documented.

Additionally, analytical data are subject to data assessment (quality assurance evaluation of analytical chemistry data). Assessments cover all monitoring activities, including sampling and analysis. Subcontracted laboratories are routinely audited and participate in inter-laboratory cross-check programs. Assessments are conducted pursuant to the RFETS Site Integrated Oversight Manual (1-MAN-013-SIOM), in compliance with DOE Order 414.1 and the Kaiser-Hill Team Quality Assurance program. All assessment findings are tracked and corrected pursuant to the Site Corrective Action Requirements Manual (1-MAN-012-SCARM) and the Kaiser Hill Corrective Action Process (3-X31-CAP-001). The *IMP Background Document* details the overall QA/QC requirements, including field duplicate and blank samples, analytical detection limits, and standards for accuracy and completeness.

2.0 SURFACE WATER

2.1 Introduction

The surface water monitoring program at the Site addresses the requirements of statutes, regulations, orders, and agreements, and supports many decision-making processes. Surface water monitoring (summarized in Table 1) encompasses five areas:

- Site-wide water quality;
- Quality of waters within the Industrial Area;
- Quality of discharges from the Industrial Area;
- Quality of water leaving the Site; and
- Off-site water quality.

Protocols for sampling and analysis of surface water, as well as QA/QC requirements, are defined in several documents. Refer to Section 2.1.5 of the *IMP Background Document* for details.

The Site maintains surface water data in the Rocky Flats Soils and Water Database (SWD) (formerly the Rocky Flats Environmental Database System, or RFEDS), and the data can be retrieved and reported in many formats for specific purposes. Many of the data generated are not specifically reported in Site documentation, but rather are provided to requestors or decision makers as needed. However, regularly generated reports include:

- National Pollutant Discharge Elimination System (NPDES) permit compliance reports including monthly and annual preparation and delivery of the Discharge Monitoring Report (DMR) to EPA Region VIII.
- Pre-discharge and community assurance monitoring results gathered by the State and reported routinely to the Site and nearby cities.
- Reportable RFCA monitoring results (those above of RFCA standards and action levels) reported to EPA and CDPHE.
- The bulk of the surface water data collected are summarized and reported at Quarterly Information Exchange Meetings, which have been held since 1972

Table 1
Surface Water Monitoring Matrix

Type of Monitoring	Locations	Sampling Frequency	Sampling Performed By	Purpose
SITE-WIDE				
Dam Operations (IDLH)	All detention ponds	Various regular intervals	Site personnel	Assess need for discharges from ponds to ensure dam integrity
Streamflow	7 stream locations	Continuous when flowing	Site personnel	Determine streamflow upgradient of Ponds A3, A4, B5, and C2. Determine outflow from Ponds A4, B5, and C2
Pond Elevations	4 pond locations	Daily (hourly if needed)	Site personnel	Monitor amount of water detained in Ponds A3, A4, B5, and C2
Piezometers	Dams at Ponds A3, A4, B1, B3, B4, B5, and C2, Landfill	Continuous	Site personnel	Monitor level of saturated zone in detention structures
Dam Integrity Inspections	12 dams	Various	Site personnel, FERC, and DOE	Assess physical integrity of earthen dams
<i>Ad Hoc</i>	Varies	As needed ¹	Site personnel	Address need for special monitoring
New Contaminant Sources	Varies	As needed ¹	Site personnel	Identify source(s) of any new contamination detected by the surface water monitoring program
Plutonium Correlation	POCs, plus 5 additional locations	As needed ¹	Site personnel	Correlate plutonium concentrations to levels of more easily measurable parameters
INDUSTRIAL AREA				
New Source Detection	5	As needed ¹	Site personnel	Detect changes in AoI concentrations or water quality parameters that might indicate new contamination
Incidental Waters	Varies	As needed ¹ (100–200 events/yr on average)	Site personnel	Determine acceptable disposal method
Performance Monitoring (Source Location)	Varies	As needed ¹ , generally from 18 months before project start-up to 3 months after completion	Site personnel	Establish baseline conditions and monitor effects of Site activities on water quality

Table 1 (Continued)
Surface Water Monitoring Matrix

Type of Monitoring	Locations	Sampling Frequency	Sampling Performed By	Purpose
INDUSTRIAL AREA DISCHARGES TO PONDS				
Stream Segment 5	4 Action Levels and Standards Framework (ALF) locations	Varies ¹ (total approx. 85 samples)	Site personnel	Monitor compliance with RFCA action levels
Internal Waste Streams	Discharges from buildings, WWTP, terminal ponds, and cooling towers, plus any new discharges	Various intervals, depending on location	Site personnel (EPA Region VIII conducts annual NPDES permit inspections)	Confirm NPDES permit compliance
Discharges to WWTP	New waste streams	As needed ¹	Site personnel	Consider for discharge to WWTP
WWTP Collection System	2 locations in collection system	Regular intervals specified in IMP Background Document	WWTP (Site) personnel	Check for signs of corrosivity and monitor LEL
WWTP Radiological Monitoring	WWTP influent collection lines and effluent	Influent monthly, effluent monthly	Site personnel	Monitor impact of cleanup activities on WWTP and determine removal efficiency
NPDES-Permitted Discharges	WWTP outfall and terminal pond discharges	Specified in NPDES permit	Site personnel	Demonstrate permit compliance and provide data for permit updates
WATER LEAVING THE SITE				
Predischarge	Ponds A4, B5, and C2	Approximately 8–10 events/yr (1 per yr at C2)	Site personnel (CDPHE analyzes samples)	Determine quality of water to be discharged from terminal ponds
Terminal Ponds	3 terminal ponds	Frequency specified in IMP Background Document	Site personnel	Verify that industrial discharges do not endanger waters of the U.S.
Segment 4	5 locations	Approximately 3 samples for each of 8–10 discharge events, plus 1–3 samples per month between discharges ¹	Site personnel	RFCA point of compliance (POC) monitoring
Non-POC at Indiana St.	Walnut Cr. & Woman Cr. Drainages	Total of 21 samples annually	CDPHE	Assess effects of flow changes on nutrient loads in water leaving the site

Table 1 (Continued)
Surface Water Monitoring Matrix

Type of Monitoring	Locations	Sampling Frequency	Sampling Performed By	Purpose
OFF SITE				
Uncharacterized Discharges	5 primary locations, but could vary with circumstances of discharge	As needed ¹	Site personnel	Assess impact of uncharacterized discharges on community water supply facilities
Community Assurance	4 points in Westminster and Broomfield water treatment process streams	Weekly, with samples composited semiannually or annually	Westminster and Broomfield municipal employees	Notify municipalities in the event of water quality exceedances; provide data for dose reconstruction studies

¹ Sampling frequency is determined based on project plans. (Refer to *IMP Background Document* for more information.)

Notes:

- ALF = Action Levels and Standards Framework
- AoI = Analyte of Interest
- CDPHE = Colorado Department of Public Health and Environment
- Cr = Creek
- DOE = Department of Energy
- EPA = U.S. Environmental Protection Agency
- FERC = Federal Energy Regulatory Commission
- IDLH = Imminent Danger to Life and Health
- IMP = *Integrated Monitoring Plan*
- LEL = Lower Explosive Limit
- NPDES = National Pollutant Discharge Elimination System
- POC = Point of Compliance
- POps = *Pond Operations Plan*
- RFCA = *Rocky Flats Cleanup Agreement*
- WWTP = Wastewater Treatment Plant

2.2 Site-Wide Water Quality

This section deals with surface water monitoring objectives that are not confined to a particular area of the site. Site-wide monitoring includes:

- Monitoring the dams that form the Site detention ponds (dams lie within a defined area, but monitoring is performed to ensure their effectiveness);
- Locating the source of any contamination detected by the monitoring objectives described in subsequent sections of the IMP;
- Specific monitoring activities in response to requests (i.e., *ad hoc* monitoring);
- Monitoring to establish a correlation between plutonium concentrations and levels of indicator parameters; and
- Monitoring performed for operational reasons and BMPs, but not enforceable under RFCA or other federal and state laws and regulations.

The Site-wide monitoring is described below.

2.2.1 Monitoring Dam Operations

The Site detention ponds (Figure 1) are formed by earthen dams, which are designed for stormwater detention. Once water quality is determined to meet downstream standards water is routinely discharged from the ponds as levels rise. Although water rarely rises to the elevation of emergency spillways, there is a risk that the dams could fail or sustain damage.

The Site uses data from the monitoring activities listed below, along with water quality data from the ponds, within a specific decision-making process (see *IMP Background Document*, Section 2.2.1 and ancillary documents cited therein) to determine if, and when, water should be released from the ponds. The Site performs the following monitoring activities:

- Measure streamflow upgradient of Ponds A3, A4, B5, and C2;
- Measure outflow from Ponds A4, B5, and C2;
- Monitor pond elevations continuously in Pond A-3, Landfill Pond, and Terminal Ponds A4, B5, and C2. Daily monitoring is adequate for normal operations; hourly monitoring is invoked as established by procedure (e.g., in response to storms) to ensure dam safety;

- Monitor piezometers installed in the dams to track the level of the saturated zone in the earthen detention structures;
- Evaluate dam integrity through visual inspections at appropriate frequencies as determined by procedure;
- Perform routine integrity inspections on dams on all 12 ponds at appropriate frequencies as determined by *Pond Operations Plan* (POP) (Kaiser-Hill et al., 1996), and perform a detailed internal inspection biannually. Federal Energy Regulatory Commission (FERC) and DOE inspect dams externally on an annual basis;
- Monitor spatial position of the crest monument to detect movement, if any, as required by the Colorado State Engineer's dam safety regulations;
- Monitor the inclinometers and evaluate dam crest movements quarterly to identify any movement of dam structure; and
- Exercise the valves in the outlet works of the terminal dams to ensure operability, as directed by the Office of the State Engineer.

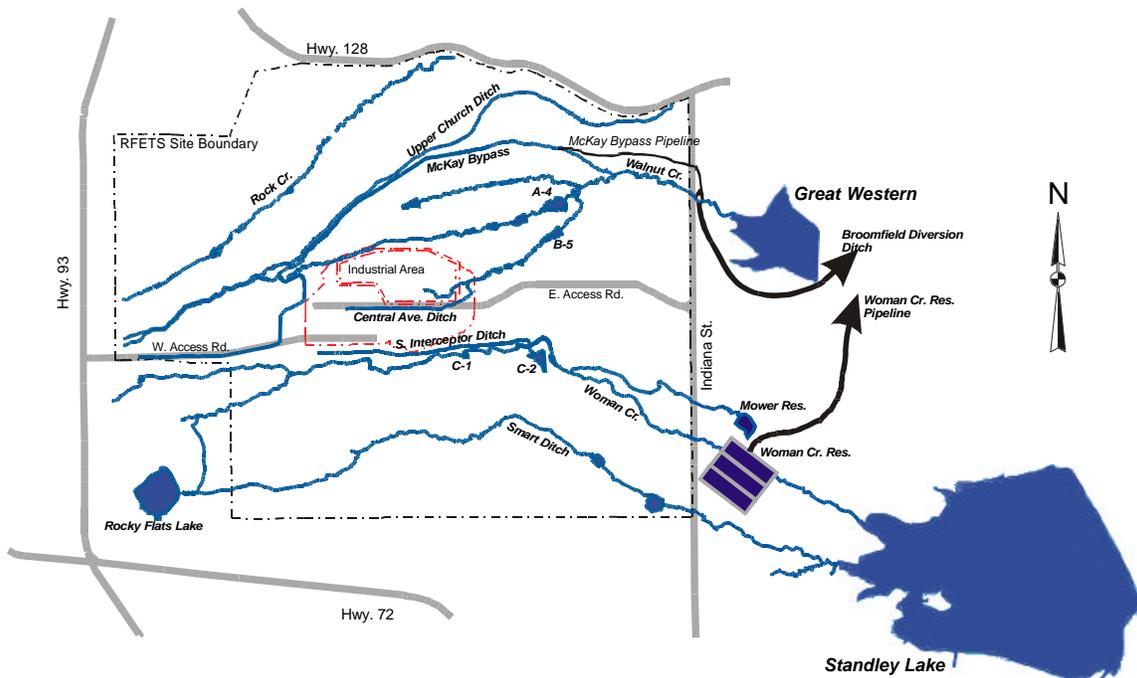


Figure 1. Schematic Surface Water Map

Data are entered into a spreadsheet model to assess the need for discharge, based on the *Pond Operations Plan*. Meteorological data are also used in the model, along with inflow and discharge rates as applicable.

2.2.2 Locating New Contaminant Sources

If new contamination is indicated by surface water monitoring, New Source Detection (NSD), POE, or Point of Compliance (POC) stations, the Site may use portable sampling equipment to help further isolate the source. This monitoring may cross the boundaries of other surface water monitoring objectives. For instance, if contaminants are detected outside the Industrial Area, portable sampling equipment may be deployed inside the Industrial Area to locate the source (see *IMP Background Document*, Section 2.2.2).

2.2.3 Ad Hoc Monitoring

Ad hoc monitoring is designed to address specific identified data needs. The data needs arise in response to circumstances that are not addressed by the routine monitoring program. *Ad hoc* monitoring falls into one of two categories:

- *Required*—Statutory, regulatory, permit, or other requirements that monitoring must be done to obtain analytical data; and
- *Discretionary*—Where analytical data could help with further decision making, or a need for additional data is otherwise strongly indicated.

Ad hoc monitoring may be conducted in response to events such as unusual precipitation volumes, community concerns, changes in Permit or regulatory requirements, construction projects, operations, or spills.

2.2.4 Monitoring for Correlation of Plutonium with Indicator Parameters

The Site continues to study whether a correlation can be established between plutonium concentrations and levels of indicator parameters that can be measured frequently, or even continuously, at much less expense than radiochemically analyzing samples for plutonium. For instance, total suspended solid (TSS) concentrations may provide an indication of plutonium concentrations, because plutonium and other radionuclides tend to be adsorbed by particulate matter in surface water. Although measuring TSS requires a laboratory analysis, the lag time between sample collection and data delivery is considerably shorter than for a radiochemical analysis. Turbidity, which can be measured continuously, may also correlate with plutonium concentrations. If so, continuous turbidity measurements would provide an early indication of potential rising plutonium concentrations, improving the protection of public health and the environment. The technical hurdle in this effort remains the issue of sensitivity: identifying reliable correlations at very low concentrations challenges the available analytical methods.

Plutonium concentrations are already being monitored at the terminal pond outfalls and at the Indiana Street RFCA POCs. The Site also monitors TSS concentrations when possible at these five stations. In addition, the Site monitors, when possible, TSS and turbidity at stations SW022, GS10, SW093, SW091, and SW027, which are located

sufficiently upstream in Segment 5 that they would provide at least two hours warning before exceedances could occur in Segment 4. The Site also monitors precipitation at several locations.

The Site will evaluate the data from this monitoring objective to study the correlation between plutonium concentrations and levels of indicator parameters. Based on this analysis, this monitoring objective may be modified in the future to further define any correlations observed.

2.3 Water Quality Within the Industrial Area

The Site monitors water within the Industrial Area to detect new sources of contamination, assess the performance of facilities or project elements (e.g., during closure of a facility) in preventing releases of specific constituents, and assess the quality of incidental rainwater or snowmelt that may accumulate in utility pits and bermed areas. Indications of a contaminant release would trigger reporting and decision-making for response and/or remediation. The Site conducts the following activities under this portion of the surface water monitoring program:

- Project-specific performance monitoring;
- Management of incidental waters;
- Sanitary system monitoring including:
 - Characterize internal wastewater streams for NPDES permit compliance;
 - Monitoring discharges to the Wastewater Treatment Plant (WWTP); and
 - Monitor total flow, potentially dangerous or damaging waste streams, and radiological activity of influent to the WWTP;
- WWTP influent monitoring; and
- WWTP collection system monitoring.

2.3.1 Incidental Water

Approximately 100–200 occurrences per year of incidental water at the Site require monitoring. Water that accumulates in utility pits, berms, footing drains, sumps, and excavation sites, or that is released within buildings or onto the ground, is evaluated using field screening observations and measurements, coupled with the process knowledge of Site personnel. Additional analysis is required if the circumstances or field observations provide cause to suspect the presence of oil or hazardous/radioactive constituents.

The program for monitoring incidental water provides for routine, data-driven decision making on whether to allow discharge of these waters into the environment without treatment. When evaluating incidental water, field personnel estimate the volume of water present, note its appearance (especially its color or presence of a visible sheen), and field test its pH, nitrate level, and conductivity. In conjunction with knowledge of the processes occurring in the immediate vicinity, these data guide the process of deciding how to dispose of the incidental water. Water that cannot be discharged to the environment may be considered for discharge to the WWTP (under internal wastewater stream rules) or may be managed under other applicable regulations.

2.3.2 Sanitary System Monitoring

Sanitary collection system monitoring may provide the Site Decontamination and Decommissioning (D&D) project managers and WWTP operators information about collection system condition within the Industrial Area contributing to the WWTP flow. Current and prospective monitoring systems provide information about the relative contribution of the two main branches of the sanitary collection system and qualitative information about the content of flows through the headworks of the WWTP. Sanitary system monitoring is conducted to:

- Determine percent removals across the treatment plant and, therefore, be able to predict compliance or noncompliance with NPDES permit effluent limitations;
- Assess explosive levels at the headworks for worker safety
- Identify corrosive substances that may impact the treatment units;
- Determine if trends in influent concentrations and loads are fluctuating up or down;
- Establish pollutant loads attributable to specific industrial internal waste streams (such as the laundry water at the Site); and
- Establish baseline conditions for the flows from the Protected Area (PA) and non-PA areas.

Five distinct monitoring objectives have been identified for sanitary system monitoring. Separate decision rules have been developed for each of these objectives and are detailed in the IMP Background Document. Each of the five objectives are discussed in the following sections.

2.3.2.1 Characterization of Internal Wastewater Streams to Meet Permit Requirements

The first monitoring objective is to characterize routine internal waste streams to meet NPDES permit requirements (see *IMP Background Document* Section 2.3.2.1 - Internal Waste Stream Characterization to Meet Permit Requirements). Data on internal wastewater streams are used to make decisions regarding the disposition of contaminated waste water produced on the Site. Monitoring is needed to determine when wastewater requires treatment versus when it can be discharged to the WWTP. The data are used to determine whether discharges to the WWTP are compatible with the activated sludge, exceed the facility's ability to handle it, and comply with the Site's NPDES permit.

The existing NPDES Permit also covers all discharges to surface water (including the WWTP outflow). Site personnel use monitoring data to maintain the Permit and to negotiate periodic Permit renewals. Both Permit maintenance and renewal may require modifying specific conditions, particularly as Site closure activities accelerate. The renewed NPDES Permit specifies all managed and incidental discharges to be monitored, including all sanitary discharges and process wastewater streams from Site buildings, along with discharges from the WWTP. Any new wastewater streams must be characterized and monitored as well. Site personnel must fully disclose all wastewater streams to EPA Region VIII, which conducts annual NPDES Permit inspections of the Site to enforce this disclosure requirement.

2.3.2.2 Monitoring Discharges to the WWTP

This monitoring objective is distinct from the non-routine objective, for which a distinct decision rule has been developed (see *IMP Background Document* Section 2.3.2.2 - Monitoring Discharges to the WWTP). Any new wastewater streams generated on the Site must be evaluated to determine how best to dispose of them. Most can be discharged to the WWTP under the terms of the NPDES Permit, but some cannot. The latter must be disposed of in accordance with applicable requirements. Site personnel screen all wastewater streams for visible sheen, color, clarity, volume, field conductivity, and pH. However, the most important factor in determining the means of disposal is knowledge of the specific process that produces the wastewater. This information is considered in making decisions regarding disposal of wastewater streams.

2.3.2.3 Monitoring the WWTP Collection System

Monitoring of the WWTP influent flows include collection system flow monitoring, protective monitoring, and radiological influent monitoring. WWTP personnel regularly check the WWTP collection system at two locations for pH, conductivity, and lower explosive limit (LEL). They also take manual pH readings at the headworks. Conductivity and pH are indicators of corrosivity, which could damage the treatment equipment, and LEL readings are taken to ensure worker safety, collection system flow monitoring and influent radiological activity. This monitoring ensures that the plant effectively processes wastewaters that change as Site closure activity increases. The WWTP monitoring objectives and decision rules are described in the *IMP Background Document* Section 2.3.2.3 - WWTP Collection System Protective Monitoring, Section 2.3.2.4 - WWTP Collection System Flow Monitoring, and Section 2.3.2.5 - WWTP Radiological Monitoring, respectively.

2.3.2.4 WWTP Collection System Flow Monitoring

Flow information for the Site's sanitary collection system is currently limited to influent records for the WWTP. The initial scope of collection system monitoring is intended to provide Site collection system flow information by installing continuous recording flow monitoring equipment at B990 on the two main collection system lines. The flow record will be used to establish annual baseline conditions for the flows from the PA and non-PA areas. Changes from the established baseline flow may be attributable to normal collection system conditions such as infiltration and inflow, or abnormal conditions, such as increased flows from areas undergoing D&D. A sanitary collection system flow baseline will be developed during FY01.

2.3.2.5 WWTP Radiological Monitoring

This objective includes the monitoring of radiological parameters at the influent to the WWTP for the purpose of tracking pollutant loads coming through the WWTP collection system. The assumption is that radiologic loads to the WWTP should be decreasing, since the Site has systematically tried to eliminate any possible connections between waste streams containing radionuclides and the collection system. During FY00, radiological influent monitoring was conducted monthly using 24 hour composite sample and analyzed by the state.

2.3.3 Performance Monitoring

Performance monitoring may be specific to individual projects (e.g., D&D, remedial activities, transition actions, or BMPs for transport and fate of plutonium in surface water runoff) within the Industrial Area.¹ In general, project-specific monitoring targets 18

¹ Although performance monitoring may be conducted at any location on the Site, the majority occurs within the Industrial Area.

months of data prior to project startup to establish baseline conditions, and continues for three months after project completion. The Site is conducting performance monitoring at Buildings, 701, 771/774, 776/777, 779, 886, and Solar Ponds and for ER for projects at the 903 Pad.

2.3.4 Monitoring NPDES Discharges to Ponds

The NPDES Permit program controls the release of pollutants into the waters of the United States and requires routine monitoring of point source discharges and reporting of results. The Site's first NPDES Permit was issued by EPA in 1974. The current Permit was originally reissued by EPA in 1984, expired in 1989, and administratively extended, and again renewed again in 2000. All monitoring for NPDES compliance is prescriptively required by EPA and is not covered by the IMP process or detailed in this document. Please refer to the current Permit for specific monitoring requirements.

Renewed Permit:

The renewed Permit for the Site identifies one monitoring point for control of discharges, the WWTP (Building 995) effluent. The NPDES/FFCA was terminated by issuance of the 2000 Permit renewal. Modifications included the elimination of discharge points except for the WWTP discharge point. The other previously permitted discharge locations will be regulated under CERCLA via the RFCA. Additional expanded scope includes plans and procedures for operations of influent/effluent storage tanks, influent monitoring at WWTP, internal wastestream monitoring, stormwater monitoring, stormwater pollution prevention plan, and WWTP influent real-time radiological monitoring feasibility study. The renewed Permit stormwater monitoring provisions result from new regulations promulgated since the 1984 Permit renewal.

2.4 Industrial Area Discharges To Ponds

Industrial Area discharges to the ponds include surface water runoff, discharges from the wastewater treatment plant (WWTP), and waters in Segment 5 which include the stream channels and interior ponds. Under this portion of the surface water monitoring program, the Site monitors:

- Segment 5 water quality; and
- NPDES-regulated discharges to the ponds.

2.4.1 New Source Detection

The Site collects surface water samples at stations SW022, SW091, SW093, SW027, and GS10, which are located in the upper reaches of the three main drainages through which

runoff leaves the Industrial Area. Analytes of Interest (AoIs) include plutonium, uranium, and americium isotopes; water quality parameters, including turbidity, pH, nitrate, and conductivity (measured every 15 minutes); and precipitation data (measured continuously at SW022) and flow rate (measured continuously). Additional AoIs also may be identified.

The “indicator parameters,” those that can be and are monitored continuously, provide a qualitative early warning of potential contaminant releases without the long turnaround time or cost of more frequent sample analyses for the specific contaminants. For example, plutonium and americium concentrations are generally correlated with TSS which correlates with turbidity, and plutonium may be correlated with nitrate concentrations. Additionally, levels of chromium, beryllium, silver, and cadmium may correlate with conductivity readings. If a continuously monitored parameter provides cause for concern about a particular contaminant, samples may be collected and analyzed for that contaminant.

2.4.2 Stream Segment 5

The Site monitors Segment 5 water quality at four RFCA POE monitoring locations (as represented by stations SW093, SW027, GS10, and 995 POE) for compliance with RFCA action levels. Reportable values require development of a source evaluation plan and source evaluation.

The RFCA Action Levels and Standards Framework (ALF) provides criteria for identified contaminants. A subset of these contaminants is monitored under this portion of the program (see Table A-26 in the *IMP Background Document*). The Site collects samples (one to four per month depending on flows) from each station for an estimated total of 85 samples during the year (see Table 2-14 in the *IMP Background Document*). The number of samples collected from each station is determined using historical flow data. Approximately 15 liters (L) of water are collected for each 500,000 gallons of stream flow to a maximum of four per month, and each 15-L sample composite is designed to contain approximately 50 flow-paced grab samples.

Collecting only one sample per month and analyzing only for the AoIs listed above would be sufficient to comply with RFCA requirements. However, the higher number of samples reduces the chance of recording a false exceedance or of missing a short-duration contaminant surge. Sampling frequency may be adjusted to accommodate changing data needs.

2.5 Water Leaving the Site

Water leaves the Site in Stream Segment 4 at Indiana Street. Four monitoring objectives have been established to assess Segment 4 water quality:

- Predischarge monitoring;
- RFCA POC monitoring of Segment 4; and
- Additional, non-point of compliance (non-POC) monitoring.

2.5.1 Predischarge Monitoring

Before water is discharged from the Terminal Ponds, it must be evaluated for a range of constituents to ensure that unexpected contaminants have not been introduced. Therefore, the Site collects predischarge samples eight to ten times per year from the Walnut Creek Drainage at Ponds A4 (North Walnut Creek) and B5 (South Walnut Creek), once per year from the Woman Creek Drainage at Pond C2, and as needed from any other ponds temporarily functioning as a terminal pond. The Site and CDPHE analyze the samples for an extensive list of constituents, including inorganic compounds, metals, volatile and semi-volatile organic compounds, radiologic parameters, herbicides, and pesticides (see Tables 2-16a and 2-16b in the *IMP Background Document* for analyte list and sampling targets). Sampling and analyses are conducted far enough in advance of a planned discharge to allow action to be taken if exceedances are noted, but near enough to the time of discharge to be representative of the discharge composition.

2.5.2 Segment 4 Compliance Monitoring

The Site performs monitoring at five RFCA POC stations in Segment 4 (GS11, GS08, GS31, GS03, and GS01). POC monitoring is concerned primarily with concentrations of plutonium, americium, and tritium, although additional analytes are monitored in a subset of samples. Approximately three samples are collected during each pond discharge event (approximately 8 to 10 discharge events per year, see Table 2-19 in the *IMP Background Document* for POC monitoring targets), and flow-proportional sampling is conducted between discharges, when flow rates are sufficient to obtain required water sample volumes.

2.5.3 Non-POC Monitoring at Indiana Street

Various off site reservoir construction and water diversion projects will cause changes in the surface water flow regime. The CDPHE conducts additional monitoring to assess the effects of these flow changes on nutrient loads in water leaving the Site. CDPHE collects samples periodically from Walnut Creek to assess the composition of the water when it consists of:

- 100% Site effluent (five samples);
- Mixed effluent and natural stream flow (five samples); and
- 100% natural stream flow (five samples).

In addition to these 15 samples, CDPHE collects 5 samples from Woman Creek during times when Pond C2 is not discharging and one sample during Pond C2 discharge. All 21 samples are analyzed for total ammonia, nitrite, nitrate, phosphate, orthophosphate, uranium isotopes, beryllium, cadmium, silver, and chromium. In the future, the latter four metals may be deleted from the analyte suite, depending on initial water quality results.

2.6 Off-Site Monitoring to Support Community Water Supply Management

Site and CDPHE personnel provide monitoring data to nearby communities for their use. Procedures are in place to monitor uncharacterized discharges from the Site and to provide data that address public concerns regarding water quality.

2.6.1 Monitoring Uncharacterized Discharges

Monitoring of uncharacterized discharges would normally be required only if monitoring, specified under the previous decision rules, is not performed in accordance with the sampling and analysis protocols (e.g. POC and POE monitoring at Indiana Street) or if flow leaving the Site exceeds the capacity of the downstream ditch or reservoirs.

If surface water of unknown quality (unmonitored) leaves the Site, it is necessary to demonstrate that the water quality is acceptable to downstream users. Examples include:

- Unmonitored storm flow exceeding the capacity of Broomfield's diversion ditch that enters Great Western Reservoir; and
- Downstream water that may have been impacted by unmonitored effluent from the Site.

2.6.2 Community Assurance Monitoring

Several factors have made it necessary for the communities to reassure residents that their environment is safe. These factors include RFETS past mission as a nuclear weapons production facility, the nature of the contaminants, the history of releases and accidents, and the geographic and hydrologic relationship of the Site to the neighboring municipalities. Adequate and timely information regarding the impact of the Site is necessary. The level of concern fluctuates with activities at the Site, but may be expected to continue as long as environmental contamination and special nuclear materials are present at the Site.

Since the completion of the Standley Lake Protection Project and the Great Western Reservoir Replacement Project, both of which were designed to protect potable water supplies, routine monitoring of the municipal treatment and distribution systems is no longer warranted. However, Great Western Reservoir is still used as an irrigation supply, and the fact that the reservoir is considered to be unsuitable for potable use raises questions on the part of irrigation customers. Therefore, during FY01, community assurance monitoring continues at Great Western Reservoir as specified in Section 2.6.2 of the *IMP Background Document*.

2.7 Watershed Integration

Geographically, the RFETS lies at the head of the Big Dry Creek Basin; functionally, every effort has been made to isolate the Site from the rest of the watershed. Historical strategies on the part of both the Site and the downstream communities have focused on limiting, to the maximum extent possible, the natural flow of surface water from the Site. Examples include past spray irrigation practices, the “Zero Discharge” goal, and the continuing detention of treated sanitary effluent and stormwater pending demonstration of acceptable water quality. Although these water management practices have been necessary to protect and reassure the downstream communities, they negatively impact the ecology of the basin and are inconsistent with the ultimate vision for the Site, as outlined in RFCA. As Rocky Flats moves toward closure, the focus must evolve toward integrating the headwaters of Big Dry Creek with the rest of the watershed.

To accomplish this objective, the Site must extend its water management strategy beyond Indiana Street, and participate with other stakeholders in identifying and implementing appropriate water quality and use goals for the basin. During 1996, DOE and its contractors progressed toward this goal by actively participating in a consensus group with the objective of achieving agreement on as many issues as possible prior to a standard-setting hearing before the Colorado Water Quality Control Commission (CWQCC). The group included representatives from the RFETS, regulatory agencies and surrounding communities, but its focus was limited to water quality issues impacting wastewater dischargers.

More recently, Site personnel helped to establish the Big Dry Creek Watershed Association (BDCWA), which began as an extension of the original consensus group, but has evolved to include any entities or individuals interested in water-related issues within the basin. In addition to the original four dischargers (e.g. RFETS, Broomfield, Westminster, and Northglenn), participants include representatives of agriculture, parks, recreation, open space, and a variety of government agencies. The BDCWA has been recognized by Denver Region Council of Governments (DRCOG) as a district watershed in the Regional Clean Water Plan. The goals the Association include public education, monitoring activities, and protection of water quality, aquatic life and habitat.

The DOE has recognized the effectiveness of this approach by becoming a party to a formal agreement to participate, with the cities, in supporting monitoring activities within the basin. The Agreement states that such support may consist of monetary contributions

or in-kind services, but shall be equitably distributed among the parties. Monitoring decisions are made jointly by the group, with input from regulators and planning agencies including EPA, the Water Quality Control Division (WQCD) and DRCOG. The immediate use of the data is to characterize the watershed and to identify and quantify any sources of impairment. Ultimately, water quality and biological data will be used to support water-quality standards, native species protection, and basin-wide planning activities. A coordinated effort to obtain accurate information about existing conditions and relative impacts is beneficial and cost effective for all Stakeholders.

2.8 Project-Specific Monitoring

Project specific performance monitoring must be detailed in a project plan through the review and approval process when the project poses a concern for a specific contaminant release, especially for a contaminant that may not be adequately monitored by other monitoring objectives downstream. Each performance monitoring location will target the contaminants of greatest concern, as identified by the implementing organization, for the specific action. Performance monitoring for specific analytes as specified in section 2.3.3 may be needed for: D&D actions, remedial actions, transition actions and BMPs for the control of plutonium transport in surface water runoff.

Project specific performance monitoring stations must be sited to monitor specific high-risk Site activities, such as D&D activities. These project specific stations will be placed upstream from the routine monitoring stations (assuming more than one source area could be contributing to the routine location), to ensure the monitor will be quantitative for releases of contaminants of concern. Data types must be specified in the project plan and analyte suites and sample collection protocols are project specific. The schedule for performance monitoring will vary with individual projects. However, the initiation will begin far enough in advance of project initiation that a statistically defensible baseline can be established. Monitoring will continue during the project activities at a rate that allows the project managers and monitoring staff to make timely changes in activities that may be impacting the water channel. The frequency will be specified in the project's Sampling and Analysis Plan. After project completion, monitoring will continue long enough to identify any residual impacts to surface water quality that may be attributable to the project activities.

This Page Intentionally Left Blank

3.0 GROUNDWATER

3.1 Purpose

Most of the groundwater at the Site is hydraulically connected to surface water. The groundwater monitoring program is designed to accomplish the following:

- Detect and identify contaminants in groundwater and monitor their concentrations;
- Identify contaminant sources and monitor remediation efforts;
- Delineate contaminant pathways;
- Assess the effects of Site remediation and closure activities;
- Protect groundwater from new sources of contamination; and
- Evaluate any effects of contaminated groundwater on surface water.

3.2 Monitoring Focus

Several contaminant plumes have been identified in Site groundwater (see Appendix D and Plate 3 in the *IMP Background Document*). The main contaminants of concern (COCs) are volatile organic compounds (VOCs), which originated from the Site's historical use and chemical storage during its years of producing nuclear weapons components. Possible sources of contaminants that could affect groundwater include storage tanks, the process wastewater system, drains, sumps, historical storage areas, and spills. The monitoring scope is designed to be conducted before, during, and after Site operations that may affect groundwater quality.

Site personnel determine the concentrations of groundwater AoIs and compare them to established background levels, as well as to Site action levels or standards. Exceedances of these criteria are evaluated to determine whether the data demonstrate an ongoing trend. The presence or absence of discernible trends is factored into the Site decision-making process (see Section 3.4.2 of the *IMP Background Document*) to assess the need for new remediation efforts or changes in ongoing activities.

Water-level measurements are incorporated into water elevation maps and hydrographs to define groundwater gradients and flow rates. Both the program for measuring water levels and the sampling and analysis program provide temporally related data for use in direct comparisons from year to year.

3.3 Monitoring Program

The groundwater monitoring program includes the following components (see *IMP Background Document*, Appendix E):

- Sampling of monitoring wells;
- Measurement of water-table elevations;
- Data management, interpretation and reporting;
- Groundwater evaluations; and
- Well control, abandonment and replacement.

Table 2 lists the frequency and number of wells for which samples and water levels are taken.

Table 2
Groundwater Monitoring Matrix

Type of Monitoring	Locations	Sampling Frequency	Purpose
Sample for determination of analyte concentrations	148 wells	Semi-annual	Monitor analyte concentrations in groundwater
Sample for determination of analyte concentrations	28 wells	Quarterly	Monitor analyte concentrations in groundwater
Water-level measurement	73 wells	Monthly	Characterize groundwater flow regime
Water-level measurement	147 wells	Quarterly	Characterize groundwater flow regime
Water-level measurement	85 wells	Semi-annual	Characterize groundwater flow regime
Water-level measurement	33 wells	Real-time	Characterize groundwater flow regime

3.3.1 Well Locations

Groundwater sampling wells have been installed along known or suspected pathways between contaminated areas and outlets to surface water. The majority of the wells are located around the perimeter of the Industrial Area, the former Operable Unit 2 (OU2) and the existing landfill. Additional wells are located within the Site drainages, because stream flow is ephemeral. Boundary wells are maintained at the downgradient (eastern) Site boundary to confirm that contaminants are not migrating off Site. On-Site wells fall into eight categories:

- Plume definition;
- Boundary;
- Plume extent;
- Performance;
- Drainage;
- Closure activities;
- RCRA (covers monitoring of permitted waste storage units); and
- Plume degradation.

3.3.2 Groundwater Sampling and Analysis

Field crews measure groundwater temperature, pH, conductivity, turbidity, and alkalinity, and submit a sample to a laboratory for measurement of total dissolved solids (TDS). They collect filtered samples for determination of metals concentrations and uranium isotopes. They also collect unfiltered samples for organic compound analyses, water quality determination, and measurement of all other radionuclides. Analytes of concern vary among wells, depending on the particular constituents in the plume being monitored. The scopes of work for the analytical laboratories contain complete target analyte lists (TALs).

The groundwater flow regime at the Site limits sample volumes from some wells. If sample volume precludes determination of the entire analyte suite for a particular well, the analyses are performed in the following order of priority:

- VOCs [Contract Laboratory Program (CLP) Method 524.2];
- Semi-volatile organic compounds;
- Pesticides and polychlorinated biphenyls (PCBs);
- Nitrate/nitrite, as nitrogen;
- Metals (TAL, plus cesium, lithium, strontium, tin, molybdenum, and silica);
- Any specific metals for a particular well (see TALs);
- Uranium-233/234, -235, -238;
- Strontium-89/90;
- Plutonium-239/240 and americium-241;
- Major anions (chloride, fluoride, sulfate, carbonate/bicarbonate); and
- Tritium.

3.4 Data Disposition

3.4.1 Databases

Site personnel enter all field data and analytical data into the SWD. Data integrity is maintained through the use of standard data entry operating procedures (Ops) and by running error-checking routines when loading data.

Data can be extracted for various uses, including use of the geographic information system (GIS) to map constituent distribution, and use of various analytical models to assess groundwater movement and constituent migration.

3.4.2 Reporting

Groundwater monitoring activities are reported through the following vehicles:

- **RFCA Annual Groundwater Report:** Quarterly reporting at the Quarterly Information Exchange Meeting presents data gathered during the reporting period, provides notification of any exceedances of RFCA groundwater action levels, and lists required actions for exceedances. These quarterly reports are used to create the RFCA Annual Report. The

Annual Groundwater Report replaced various previously required reports and serves as the primary compliance report.

- **RFCA Quarterly Reporting:** These data replace all previous, quarterly reporting, integrating the elements of each regulatory driver into a single reporting vehicle. Quarterly reporting at the Quarterly Information Exchange Meeting summarizes data gathered during the reporting period and also provides exceedance notification of RFCA groundwater quality standards.
- **IMP:** The IMP, reviewed annually, is the vehicle for documenting required groundwater monitoring program elements and is updated when necessary.

3.5 Groundwater Evaluations

Many of the DQO decisions for groundwater monitoring require the effect of potential groundwater contamination on surface water to be evaluated. In many cases, when groundwater action levels are exceeded, confirmatory samples will be taken. If analyses of follow-up samples confirm an exceedance, or if historic data indicate an impact to surface water that has not been evaluated, an evaluation will be performed. The evaluation phase will result in a focused data quality objective that will determine three things: (1) the type of data to be collected, (2) the methodology for determining the nature and extent of contamination and (3) its effect on surface water.

3.6 Well Abandonment and Replacement Program (WARP)

Section 3.6.7 of the *IMP Background Document* describes the WARP, which specifies the approval process for well installation and ensures proper recording and registration of all well installation activities. Site personnel maintain a database of all well locations, construction, permitting, and other relevant information. They also maintain a core repository for use in hydrological and geological characterization.

Well abandonment is considered if: (1) they are damaged or poorly constructed; (2) construction details are unknown; (3) they present a potential for cross contamination of other wells or the aquifer; or (4) they are no longer needed. Activities conducted under the WARP are reported in the RFCA Annual Report.

3.7 Project-Specific Monitoring

Project-specific remediation and building D&D activities may require groundwater monitoring. In cases where monitoring is not currently performed, or when there is a need for additional information not provided by existing monitoring near the planned activity, building specific potential contaminants of concern (PCOC) will be identified. Analyte suites will be developed based on knowledge of historic use and contaminants of

concern. Initially, a full sample suite will be collected to characterize the well for PCOCs. D&D activities may involve other potential contamination sources such as underbuilding contamination, building pipelines, and building sumps. These potential sources, and their effects on groundwater, will be investigated as part of the Environmental Restoration (ER) program and integrated with D&D activities. Monitoring decisions will be made on an individual-well basis prior to D&D activities. Wells will be placed downgradient from potential contaminant sources. Upgradient wells may be required if existing data is not available. Sampling protocols will be established for individual projects and sampling will begin prior to D&D activities to establish baselines. Monitoring will continue throughout the project, and for a period after project completion, to observe the results of the remediation effort. The duration of the monitoring will be determined per the guidelines outlined in the IMP background document.

4.0 AIR QUALITY

4.1 Purpose and Programs

Air monitoring activities on the Site (Table 3) assist in both protecting and informing the public, and in protecting the environment by detecting and trending the impacts of Site operations on air quality at and near the Site. Monitoring characterizes any airborne radionuclide materials that may be introduced, and identifies the associated meteorological conditions that influence the transport and dispersion of the airborne materials. Data are used to plan, implement, and assess the effects of on-Site activities, including operations, construction, and closure activities; maintain emergency preparedness; and demonstrate compliance with relevant regulations.

The Air Quality Management (AQM) group within Kaiser-Hill's Environmental Systems and Stewardship (ESS) organization determines the scope of Site air monitoring and reporting activities required to maintain compliance with applicable air quality regulations and DOE Orders. In addition, CDPHE conducts oversight monitoring through a grant from DOE.

4.1.1 Ambient Air Monitoring

Ambient monitoring of radionuclides on the Site, at the perimeter, and at several locations in the community is performed by ESS. CDPHE monitors both radioactive and non-radioactive pollutants on, and around, the Site. Ambient monitoring in the communities immediately adjacent to the Site has been supported further by DOE through the ComRad program. The purpose of these monitoring efforts is to characterize any Site-related airborne emissions. The ComRad stations, which monitor airborne plutonium concentrations, are operated independently through a grant to the Citizen's Advisory Board.

4.1.2 Effluent Monitoring

Air emissions (effluent) from Site facilities that contain significant quantities of radioactive materials are monitored continuously in accordance with state and federal regulatory requirements and agreements and are used to verify the effectiveness of radiation control mechanisms. Some facilities with lower potential to emit radionuclides are monitored periodically to satisfy specific building operational requirements. These emissions data may be used as part of the evaluation process to keep radioactive emissions as low as reasonably achievable.

4.1.3 Meteorological Monitoring

Instruments continuously monitor meteorological conditions at the Site to generate data for use in air dispersion models that predict the transport of airborne emissions. Site

personnel use model predictions to evaluate Site operations and closure projects, and to support emergency preparedness requirements.

**Table 3
Air Monitoring Matrix**

Type of Monitoring	Locations	Sampling Performed By	Sampling Frequency	Purpose
Ambient air	37 RAAMP samplers	Site personnel (AQM)	Continuous (monthly filter exchange; monthly analyses of perimeter samples)	Detect and characterize Site-related airborne rad emissions and demonstrate compliance with state and federal regulatory compliance
CDPHE Monitoring	13 continuous samplers on-Site, 5 samplers every 6 days at Perimeter	CDPHE	Continuous, or every 6 days	Detect and characterize Site-related rad and non-rad airborne emissions
Effluent from Industrial Area facilities	21 exhaust outlets	Site personnel (AQM)	Continuous (weekly filter changes with monthly compositing of most locations; monthly filter changes with annual compositing at remaining locations)	Verify effectiveness of radiation control mechanisms and provide secondary compliance data
Meteorology	1 tower with instruments at ground level and at 10, 25, and 60 m; 1 backup tower with instruments at 10 m	Site personnel (AQM)	Continuous	Monitor meteorological conditions for use in air quality modeling and for inputs to emergency response models
	5 towers at Site perimeter	CDPHE	Continuous	Provide data as needed for emergency response modeling
Special Project	Selected subset of existing ambient air monitoring locations	Site personnel (AQM)	Continuous; weekly filter exchange and gross alpha/beta counting; isotopic analyses as required	Assess impacts of D&D and ER projects

Notes:

m = Meter	D&D = Decontamination & Decommissioning
AQM = Air Quality Management	CDPHE = Colorado Department of Public Health and Environment
rad = radioactive	ER = Environmental Restoration

4.2 Site Air Monitoring Scope

The majority of ambient air monitoring and effluent monitoring is performed at the Site to satisfy requirements of Title 40 of the *Code of Federal Regulations*, Part 61, Subpart H, “National Emission Standards for Emissions of Radionuclides Other Than Radon from Department of Energy (DOE) Facilities” (Rad NESHAP) and DOE Orders. CDPHE and the ComRad program perform additional, independent air monitoring.

4.2.1 Ambient Air

The Radioactive Ambient Air Monitoring Program (RAAMP) collects ambient radioparticulate air data. The RAAMP network comprises 37 size-partitioning, high-volume ambient air samplers. Fourteen of the 37 samplers are used to satisfy regulatory compliance demonstration requirements under the CAA Rad-NESHAP provisions. One sampler is used to monitor the ambient air east of the 903 Pad. The others are used for backup should there be accidental releases from the Site or for determining localized impacts from D&D and ER projects. The samplers run continuously, collecting airborne particles on pairs of sampler substrates that segregate small inhalable particles from larger, easily deposited airborne particulate matter. Filters and impactor substrates are routinely collected and submitted for analysis for specific isotopes of plutonium, uranium, and americium. The *IMP Background Document* details specific sampling intervals and analytical detection limits.

The CDPHE also operates air samplers on Site and at the perimeter. The two state operated monitoring networks serve as independent measures of Site air quality conditions and public exposure to radioactive releases. CDPHE also monitors additional analytes, including beryllium, nitrogen dioxide, and non-radiologic pollutants regulated under the National Ambient Air Quality Standards, but not necessarily originating from Site sources.

4.2.2 Effluent Air

Exhaust air emissions from Site buildings that contain radioactive materials in sufficient quantity that they have the potential to contribute at least 0.1 mrem per year effective dose equivalent (EDE), uncontrolled, to any member of the public (“significant” sources) are monitored by continuous effluent sampling systems. Filters from these systems are changed weekly and composited for analysis for selected plutonium, americium, and uranium isotopes. Sources having low emission potential (“insignificant sources”) are not monitored unless building operational requirements dictate that continuous sampling be performed. Any radioparticulate emissions from insignificant sources that are not monitored using effluent samplers will be accounted for through the ambient monitoring network. Historically, more than 50 locations within the Industrial Area were monitored; currently, 21 building release points are continuously sampled. Tritium sampling, once conducted at one or more locations on the Site, has been discontinued, following the removal of waste materials having significant emissions potential for tritium.

4.2.3 Meteorological Conditions

A 61-meter (m) tower is located in the northwest part of the Buffer Zone, with monitoring instruments at ground level and at 10, 25, and 60 m above the ground. A separate 10-m tower nearby provides backup data of most parameters. Instruments measure wind speed and direction, temperature, and relative humidity (dew point), solar radiation, precipitation, and information used to calculate atmospheric stability class. CDPHE operates five 10-m meteorological towers located around the Site perimeter that can provide data to support Site emergency response modeling.

4.3 Special Project Monitoring

Whenever a D&D or ER project is planned that has a significant potential to release radionuclides, existing on-Site ambient air samplers are used to provide project-specific monitoring. Selected sampler substrates in the Industrial Area are exchanged weekly instead of monthly. Filters are screened through an expedited gross alpha/beta count and the results compared to predefined action levels specific to the Industrial Area and each sampler. If necessary, results of the screening may be used by project personnel to adjust schedule or project controls to ensure Site-wide compliance with state and federal regulatory requirements and as-low-as-reasonably-achievable (ALARA) principles. The filters and impactor substrates may be analyzed for selected plutonium, americium, and uranium isotopes as required.

Additional investigation is ongoing to determine the availability and feasibility of other sampling techniques that might provide sampling results more quickly without compromising the ability to detect concentrations of concern for public exposure.

5.0 ECOLOGY

The Buffer Zone around the Industrial Area at the Site is one of only a few areas along Colorado's Front Range that has remained largely undisturbed by encroaching development. The Buffer Zone contains several unique assemblages of animals and vegetation, and the ecological monitoring activities described in this section have been designed by DOE and its contractors to protect these valuable natural resources. Five major vegetation communities have been identified at the Site:

- Xeric tallgrass prairie;
- Tall upland shrubland;
- Great Plains riparian woodland complex;
- High-quality wetlands; and
- Mesic mixed grassland.

Ecological monitoring is designed to protect wildlife in the Buffer Zone, including any special-concern species (i.e., threatened, endangered, candidate, proposed, state-listed, or other sensitive species). The Preble's meadow jumping mouse is of particular concern because it was listed as a threatened species on May 13, 1998.

5.1 Monitoring Objectives

The Ecological Monitoring Program (summarized in Table 4) is designed to provide data that can be used in management and conservation decision making during Site cleanup activities that will occur over the next decade. Data also demonstrate compliance with applicable natural resource protective regulations.

Site ecologists monitor key variables in the five vegetation communities and other habitats, and changes in any of these variables would trigger ecological protection and compliance decision making. Comparisons of monitoring data over time enable ecologists to detect changes, identify potential causes, and plan corrective actions for changes that result from Site activities, rather than from natural fluctuations.

**Table 4
Ecological Monitoring Matrix**

Basis for Monitoring	Number of Locations	Sampling Frequency	Purpose of Monitoring
Manage and conserve migratory bird species numbers and richness; comply with Migratory Bird Treaty Act.	20 Transects	15 times per year	Track changes in numbers and richness of migratory birds at the Site
Manage and conserve significant wildlife species and bird species numbers and richness; comply with Endangered Species Act, other federal acts, and Colorado wildlife protection statutes.	16 Transects	12 times per year	Track changes in numbers, richness, and habitat dependence of significant wildlife species (including birds) at the Site
Manage and conserve significant species numbers and richness; comply with Endangered Species Act, other federal acts, and Colorado wildlife protection statutes.	1 Sitewide Survey (Follows all passable Buffer Zone roads.)	12 times per year	Track changes in numbers, richness, and area use of significant wildlife species at the Site
Monitor and conserve viable Preble's mouse populations in appropriate habitat, and monitor and conserve current coverage of characteristic Preble's mouse habitat. Comply with Endangered Species Act and Colorado wildlife protection statutes.	Approximately 4 locations per year based on previous year's results	2 times per year (800 trap-nights per location per year)	Monitor presence, relative populations, and habitat dependence of Preble's mouse at the Site
Monitor and conserve unique and rare vegetation communities and develop management strategies for their protection and enhancement.	44 Management Units	2 times per year	Track changes in numbers and richness of plant species, health of plant communities, and changes in areal extent of high-value vegetation communities
Monitor the noxious weeds at the Site; comply with weed control regulations.	Variable by year	2 times per year	Evaluate effectiveness of, and aid in out year planning for, weed control actions at the Site
Monitor the effectiveness of controlled burning as a management tool for conservation and enhancement of high-value vegetation communities.	Variable by year	2 times per year	Evaluate effectiveness of, and aid in outyear planning for, controlled burning actions at the Site
Monitor for the presence, or potential presence, of special-concern, threatened, or endangered plant and wildlife species and wetlands; comply with federal, state, and local protection and conservation regulations.	Variable by year	As required	Ensure compliance of projects with applicable ecological regulations and protect rare, threatened, and endangered species from harm
Monitor and conserve fish species presence in streams and ponds; comply with the Endangered Species act, other Federal acts, and Colorado Fish Protection statutes	Variable by year	Once annually	Track continued presence of fish species at the Site

5.2 Scope of Monitoring

Site ecologists conduct several types of monitoring in all five vegetation communities, as well as some activities specific to one or more communities. Common to all five vegetation communities are the following activities:

- Define the extant area of the community.
- Provide baseline estimates of the presence of birds and mammals, and estimate the baseline species richness of plant, bird, and mammal populations. (Plant species richness baseline will be determined from 1993–96, or 1997 data as applicable, and bird and mammal baseline was established in the *1996 Annual Wildlife Survey Report* (Kaiser-Hill, 1997b).
- Identify rare or imperiled plant or animal species.
- Make annual estimates of plant, bird, and mammal species richness. (Plant data are collected in the spring and summer to ensure that spring ephemerals and late-maturing plants are recorded, and bird and mammal species richness is measured monthly).
- Conduct weed mapping and photo surveys. (Photo surveys are conducted in both summer and winter in woody communities and annually in grasslands).
-
- Monitor the presence of noxious weeds and the effects of weed control efforts.
- Anticipate impacts from proposed Site projects, and estimate the potential area affected.

Ecologists also monitor the presence of noxious weeds and changes in plant community characteristics in areas not included within the five vegetation communities defined above.

5.2.1 Preble's Meadow Jumping Mouse

Populations of Preble's meadow jumping mouse have been identified within areas of tall upland shrubland and Great Plains riparian woodland. Monitoring activities in these areas include:

- Monitoring Preble's mouse populations (using all monitoring through 1996 as a baseline) and habitat over time. Monitoring concentrates on determining the presence or absence of the species; quantitative population measurements are not appropriate because of its rarity. Monitoring data provide a basis for tracking ratios of males to females and adults to juveniles, enabling population viability to be confirmed. Ecologists monitor the known population areas on a rotating basis, depending on results from the previous field season. They trap only during May through September because the mouse hibernates over the winter months.

5.2.2 Wetlands

In addition to the activities listed above, the U.S. Army Corps of Engineers determines the extent of wetlands at the Site every five years. It is expected that they will conduct the next wetlands evaluation after the year 2000. A comprehensive plan ^(Kaiser-Hill, 1997^c) to manage and protect Site wetlands was issued in 1997, detailing the methods and procedures that will be used to identify wetlands and minimize impacts to them from Site closure and remediation projects.

5.2.3 Project-Specific Monitoring

Proposed Site projects will be evaluated in terms of potential effects on threatened and endangered (T&E) species, species of special concern (SSC), and migratory birds and wetlands. Much of the data for such evaluations will come from the monitoring activities listed above, but additional data needs may be identified to assess the impact of such projects in specific areas. Project-specific data needs may include:

- Seasonal presence or absence of affected species, and the seasonal timing of the proposed project;
- Presence of habitat considered suitable for T&E and SSC species; and
- Biological characteristics of species of concern (feeding and nesting habits, home range, habitat preference), and potential effects of the proposed project.

Proposed projects will also be evaluated in terms of their impacts to migratory birds and Site wetlands. (Wetlands include both those mapped by the U.S. Army Corps of Engineers and those not included on the map.)

5.3 Data Disposition

Ecological data was historically stored in two databases [the Ecological Monitoring Program Database (EcMPD) and the Sitewide Ecological Database (SED)]. Because extracting data for specific purposes requires a high degree of system-specific knowledge, the two databases were combined. The new database, the Site Ecological Database, allows for multi-user access (with security restrictions) and ease of use with minimal training.

5.4 Reporting

A comprehensive ecological management plan (Kaiser-Hill, 1997e) is in place, setting forth the management actions that will be required to preserve the valuable ecological resources present at the Site. Site ecologists will update or modify this plan as required by variations in Site conditions, available technology, or changing regulations.

The Ecological Monitoring Program issues the following reports annually:

- Wildlife survey report (including a monitoring on the Preble's meadow jumping mouse); and
- Site vegetation report.

The Vegetation Management Plan is issued annually to document planned weed control and other management efforts for the year.

This Page Intentionally Left Blank

6.0 INTERACTIONS AMONG MEDIA

Interactions can be identified between groundwater and surface water, between air and soils, and among all of these media and ecological conditions both on-Site and potentially at off-Site locations (see Table 7-1 of the *IMP Background Document*). Also, activities upgradient from the Site (e.g., aggregate mining to the west) can influence environmental conditions on the Site and downgradient from it. The monitoring described in the previous sections provides information from which correlations among media can be identified and their effects characterized. For example, surface water quality will be influenced by groundwater perturbations, at least near their interface, and the interaction can be characterized.

Chemical and physical soil characteristics can influence air, surface water and groundwater quality. While soils are not monitored routinely as part to the Integrated Monitoring Program, many of the interactions are relatively well understood and others are being characterized through special Actinide Migration Evaluations currently in progress through Site funding. In particular, these studies will assist in understanding the importance of soil transport and the influence of water and air on transport relative to the ultimate fate of radioactive contaminants known to exist in the surficial soils at the Site. This study may point to additional monitoring needed to take the Site to a safe, environmentally sound closure.

Significant habitat effects could accrue from upgradient off-Site activities, as well as on-Site projects, and variations in water supply could affect on-Site and downgradient off-Site habitats. Therefore, to gather data beyond those generated by the monitoring programs described previously, Site personnel collect watershed-level information to assess water availability in the Buffer Zone. Instruments continuously monitor flow at 15 Site locations, and personnel collect seasonal grab samples from seven of those locations for chemical analysis to assess compliance with various regulations (see Table 6-2 in the *IMP Background Document*). In FY99, aquatics sampling on the Site was performed for the first time in a number of years. The resulting data, and other water quality data, is being analyzed in concert with data being collected off-Site by other stakeholders. These data will supplement understanding of downgradient influences due to Site and upgradient impacts on water quality.

The IMP working group will continue to meet periodically to discuss new data needs to address our understanding of the interactions among media, especially relating water quality and quantity to the ecological condition of the Site.

This Page Intentionally Left Blank

7.0 REFERENCES

- Kaiser-Hill Company, L.L.C., 1997a. *Rocky Flats Environmental Technology Site Integrated Monitoring Plan*.
- Kaiser-Hill Company, L.L.C., 1997b. *1996 Annual Wildlife Survey Report, Natural Resource Protection and Compliance Program*, Boulder, Colorado. April 25.
- Kaiser-Hill Company, L.L.C., 1997c. *Site-Wide Wetland Comprehensive Plan for the Rocky Flats Environmental Technology Site*, prepared by PTI Environmental Services, Boulder, Colorado.
- Kaiser Hill Company, L.L.C., 1997d. *Database Development Plan for the Rocky Flats Environmental Technology Site*. Prepared by PTI Environmental Services, Boulder, Colorado.
- Kaiser Hill Company, L.L.C., 1997e. *Ecological Resource Management Plan for Rocky Flats Environmental Technology Site*. Prepared by PTI Environmental Services, Boulder, Colorado.
- Kaiser Hill Company, L.L.C., 1997f. *Integrated Weed Control Strategy for the Rocky Flats Environmental Technology Site*. Prepared by PTI Environmental Services, Boulder, Colorado.
- Kaiser-Hill Company, L.L.C., 1997g. *Integrated Weed Control Plan for the Rocky Flats Environmental Technology Site*. February.
- Kaiser-Hill Company, L.L.C., 1998. *Rocky Flats Environmental Technology Site Integrated Monitoring Plan Background Document*.
- Kaiser-Hill Company, L.L.C. and Rocky Mountain Remediation Services, L.L.C., 1996. *Pond Operations Plan: Revision 2, RF/ER-96-0014.UN, PADC-96-00358*.
- U.S. Department of Energy, 1991. *Federal Facility Compliance Agreement*. March.
- U.S. Department of Energy, Colorado Department of Health and Environment, and U.S. Environmental Protection Agency, 1996. *Final Rocky Flats Cleanup Agreement*, July.